



**MODEL 123-V
WINTERIZATION**


Drain Water Tank




Check Anti-Freeze Strength



Close Tank Valve

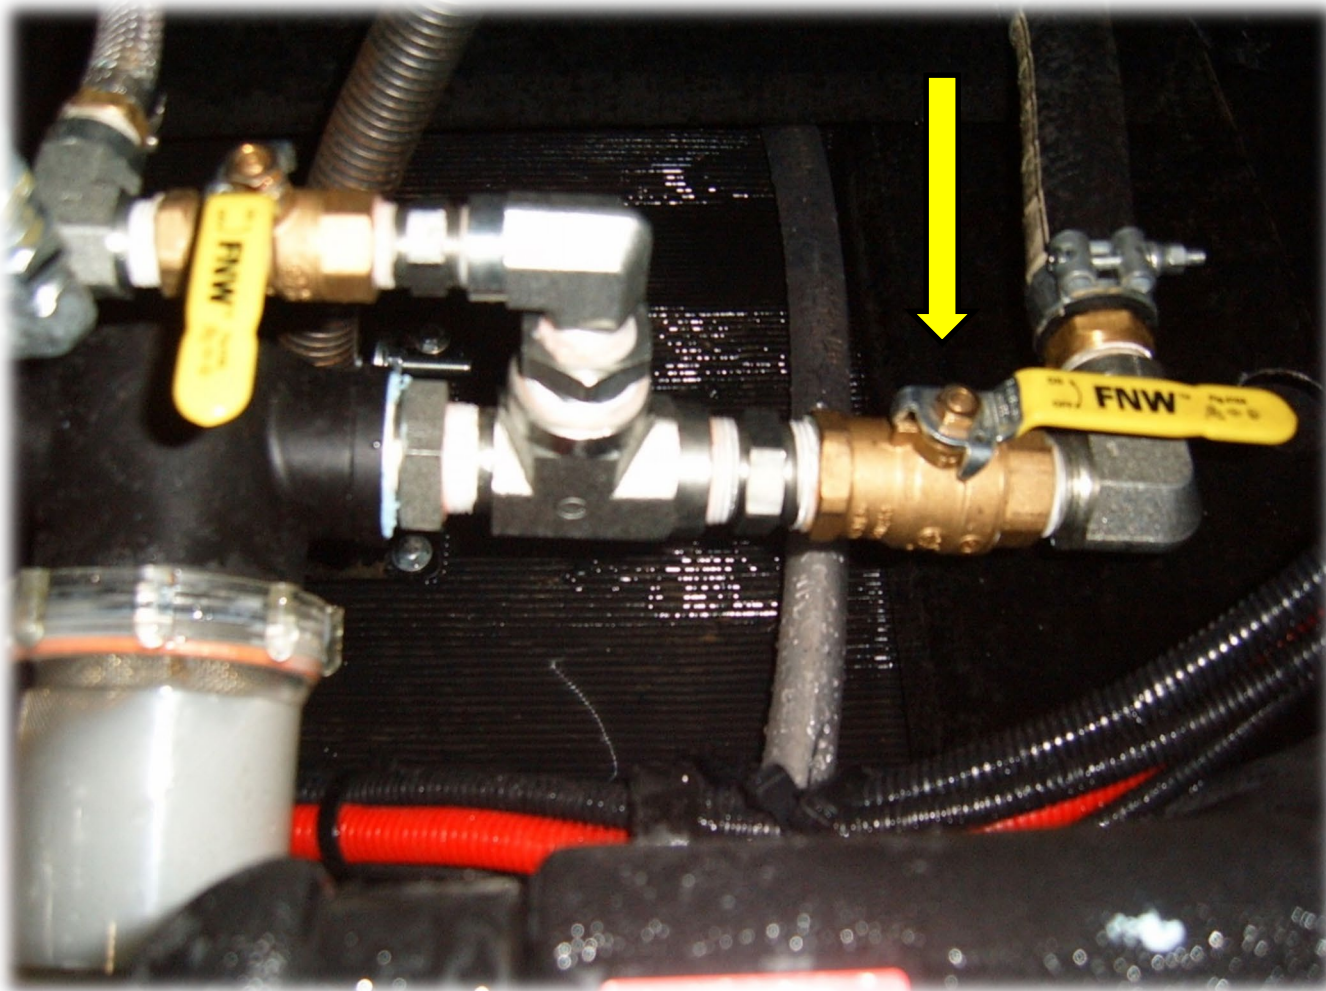


Open Anti-Freeze Valve

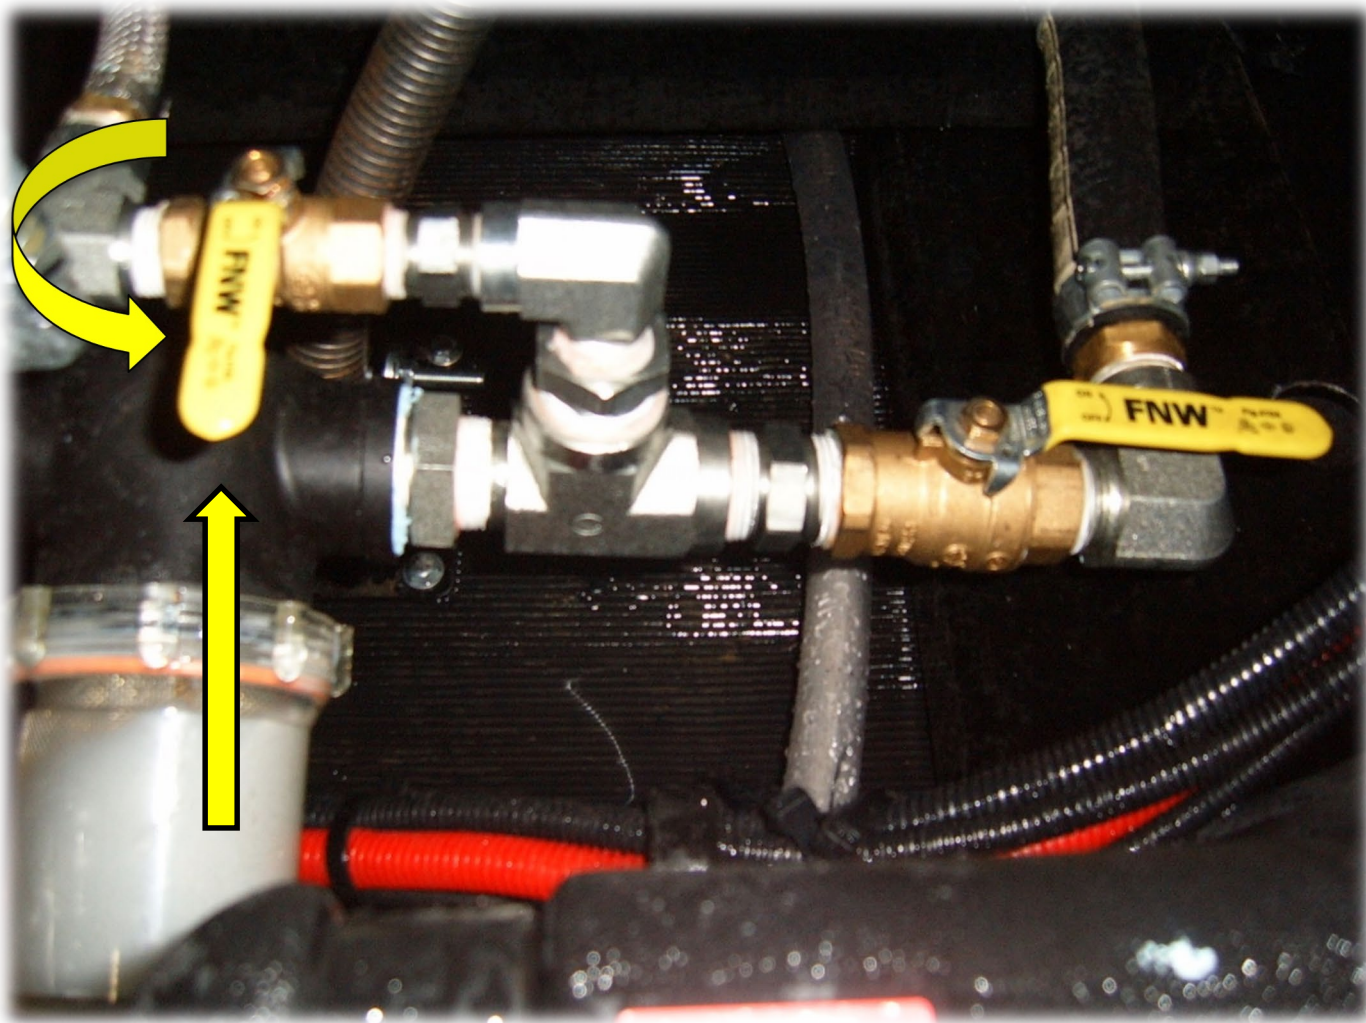


Go to Control Panel



Variable Valve Close

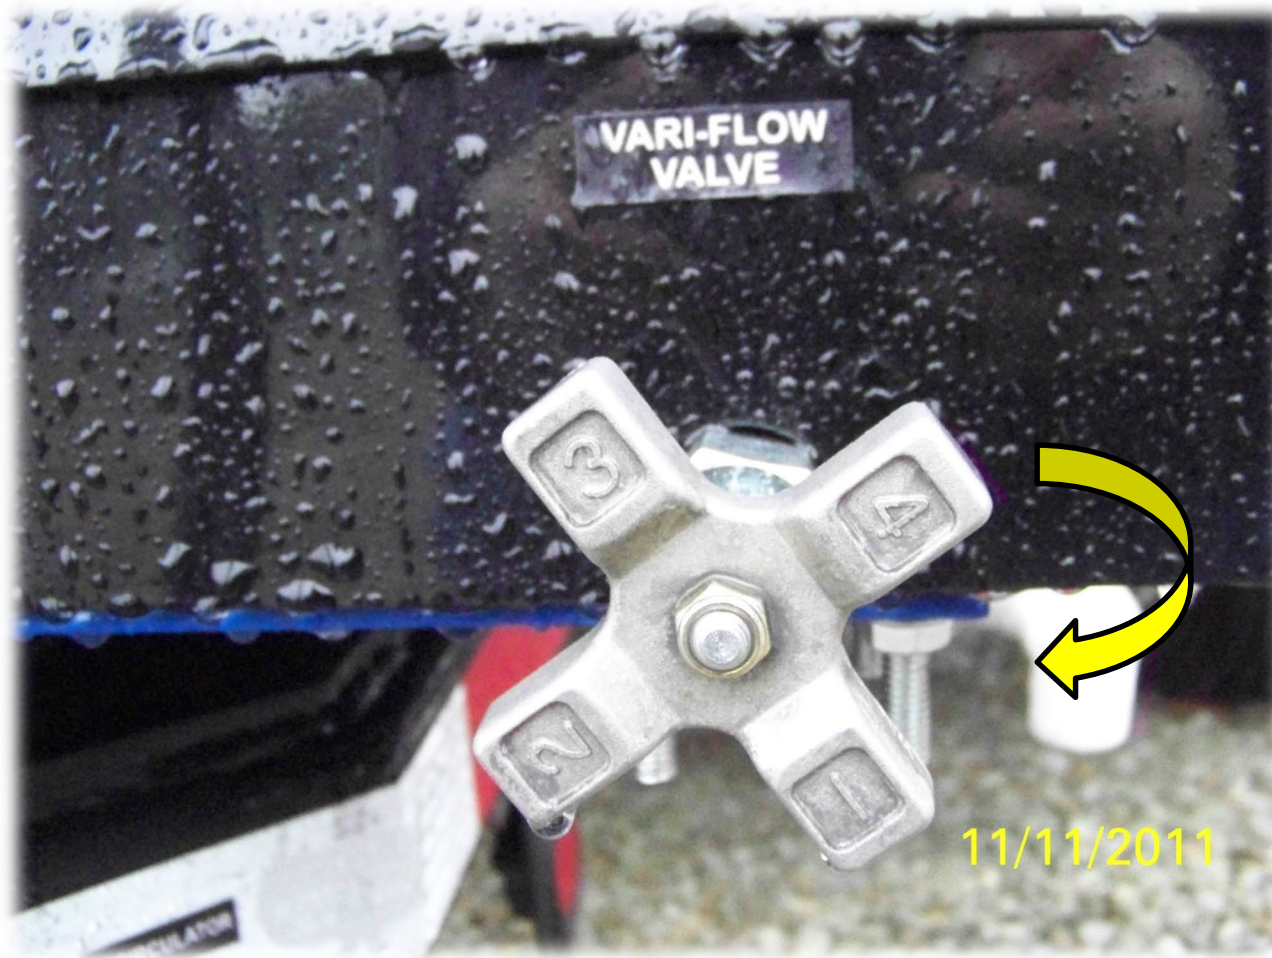


Disconnect Hose

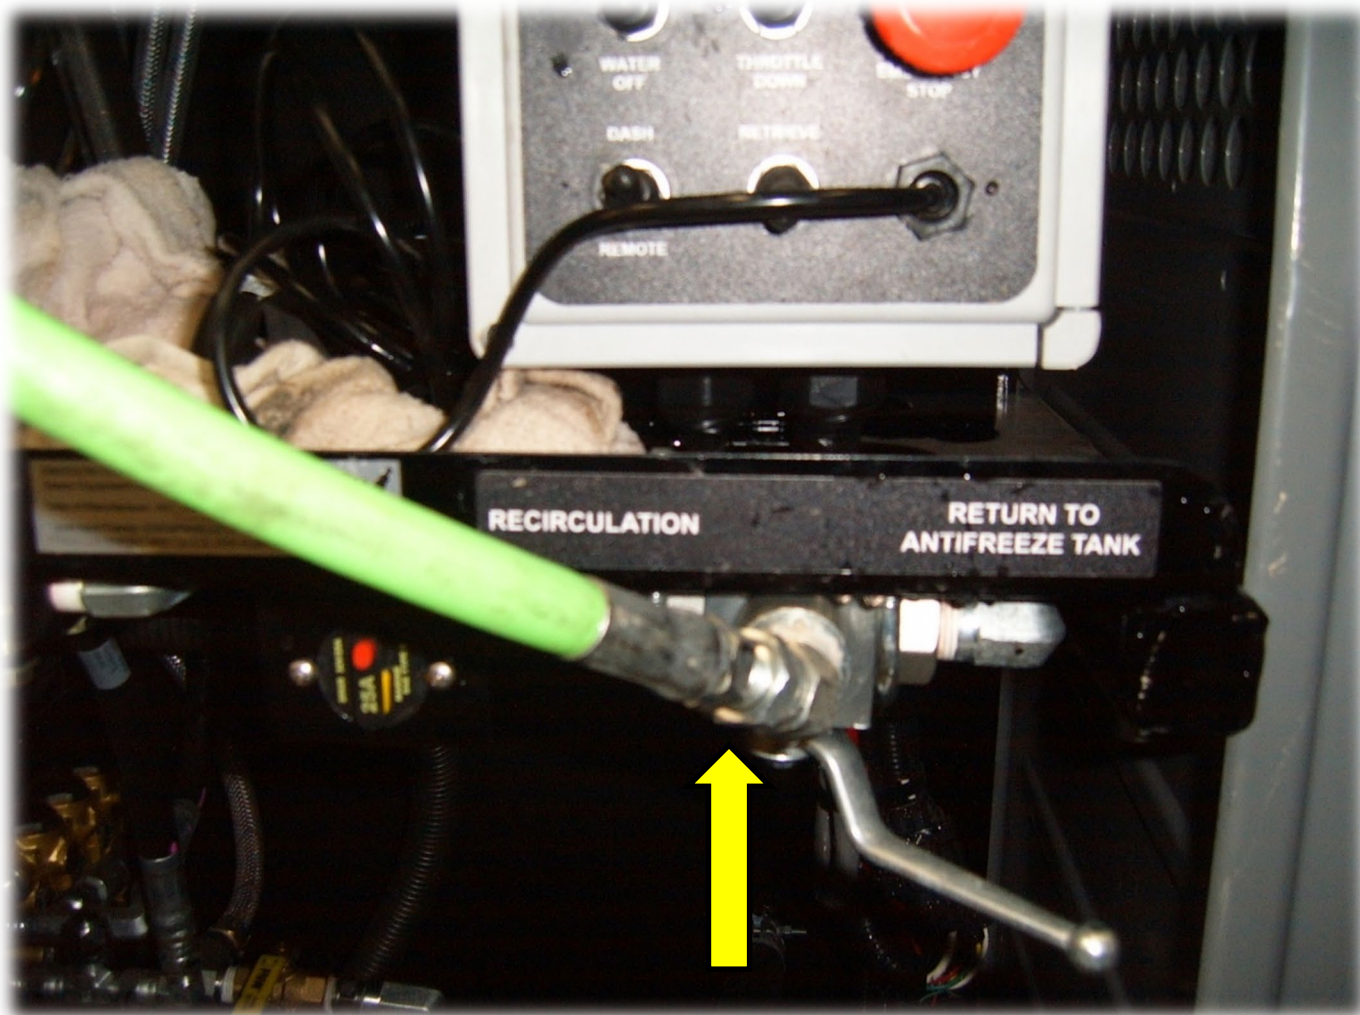


Turn Water On




Start Engine

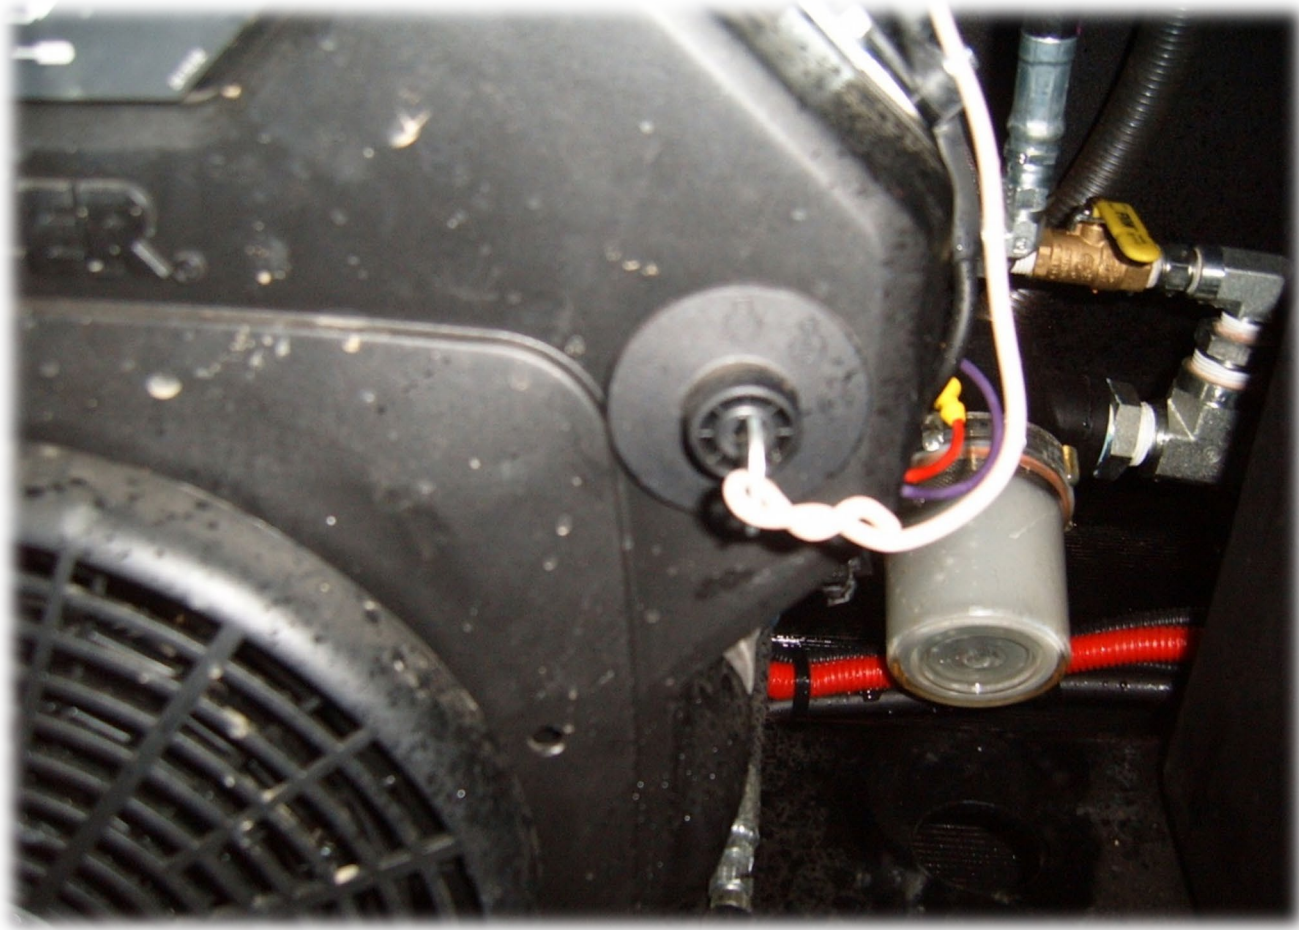


When Water Turns to Anti-Freeze, Turn Key Off

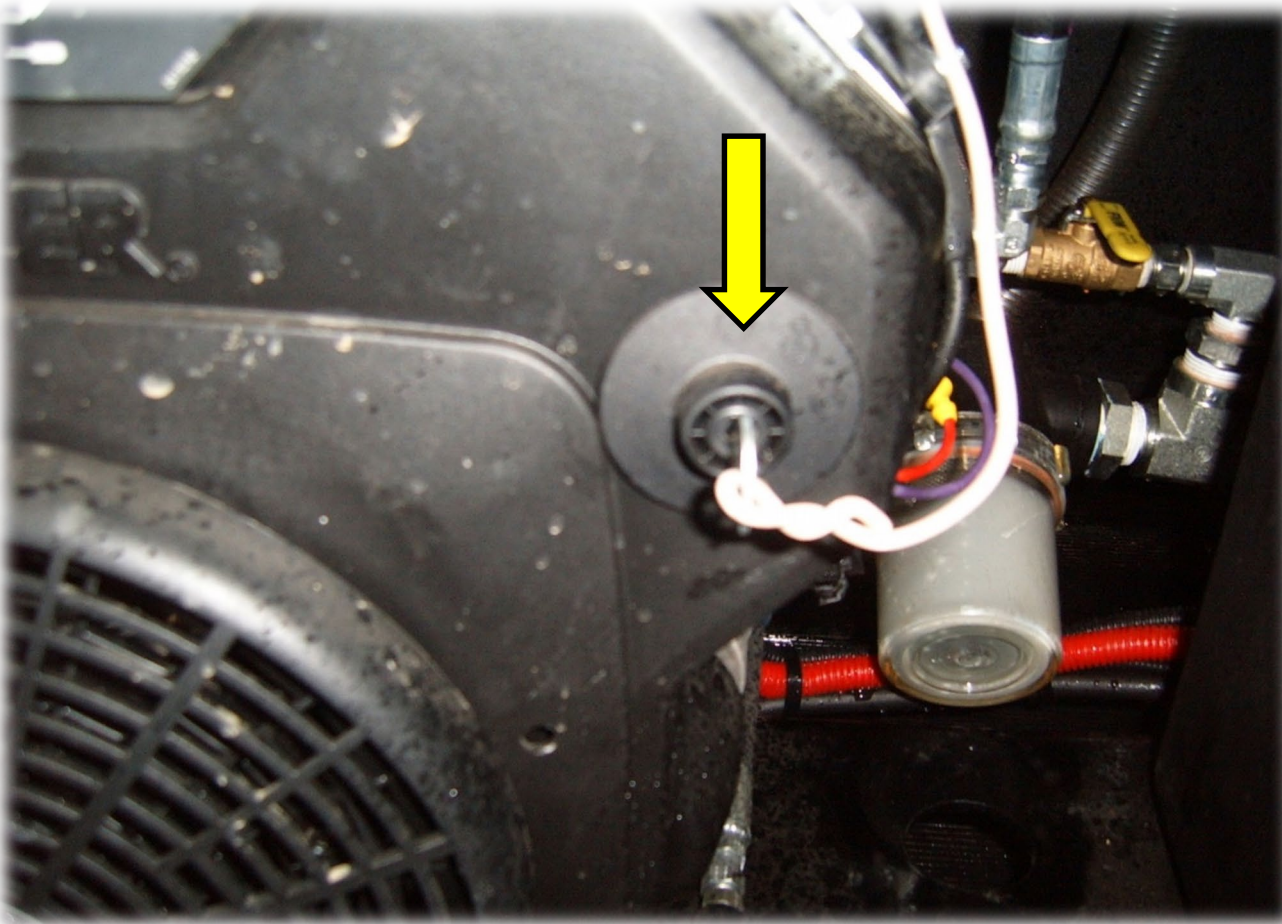


Connect to Return Anti-Freeze

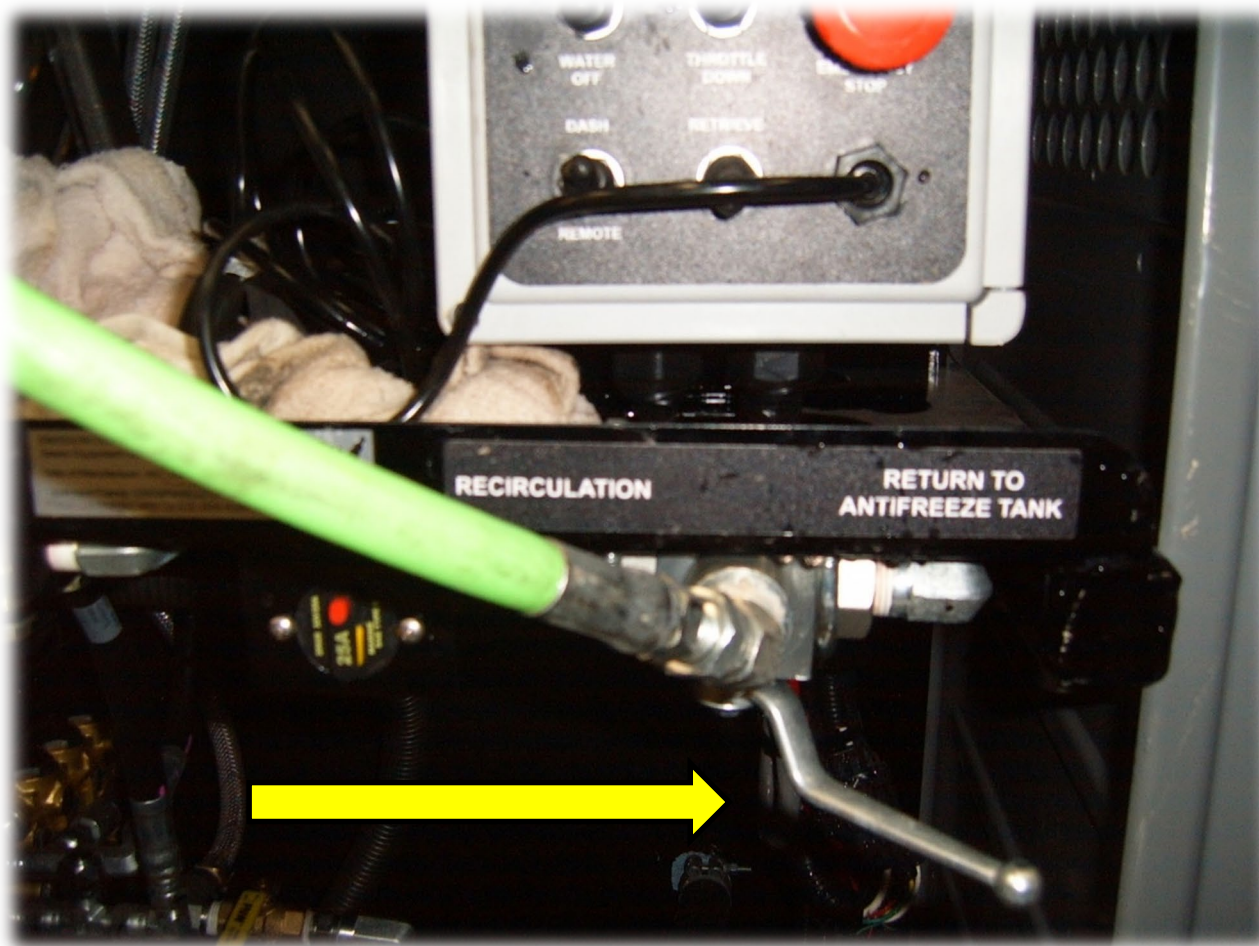

Start Engine

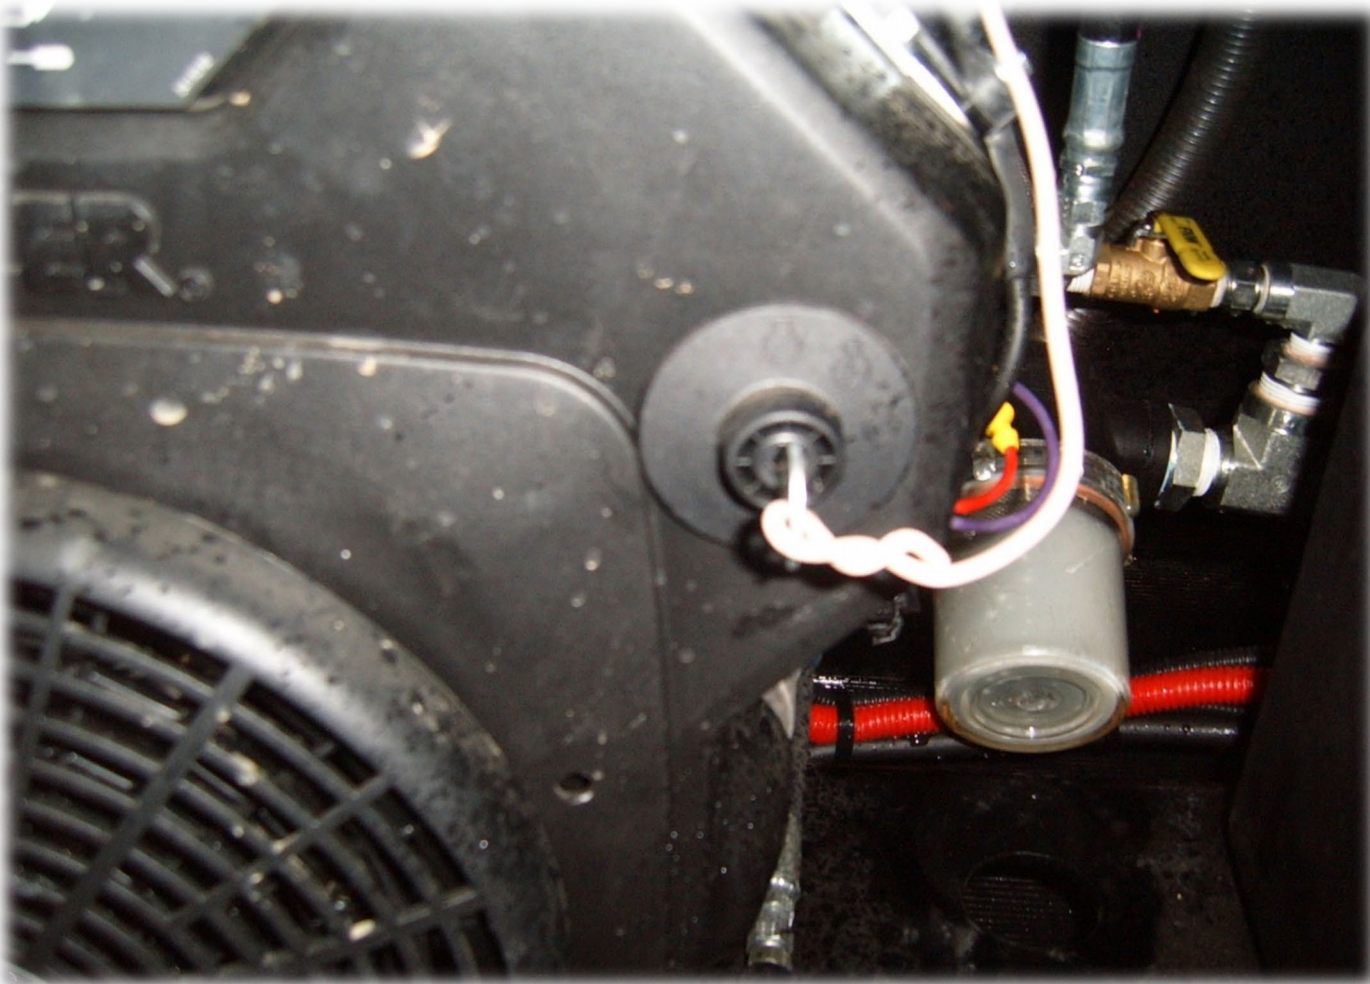


Turn Variable Valve on for 5 Seconds and Turn Back Off

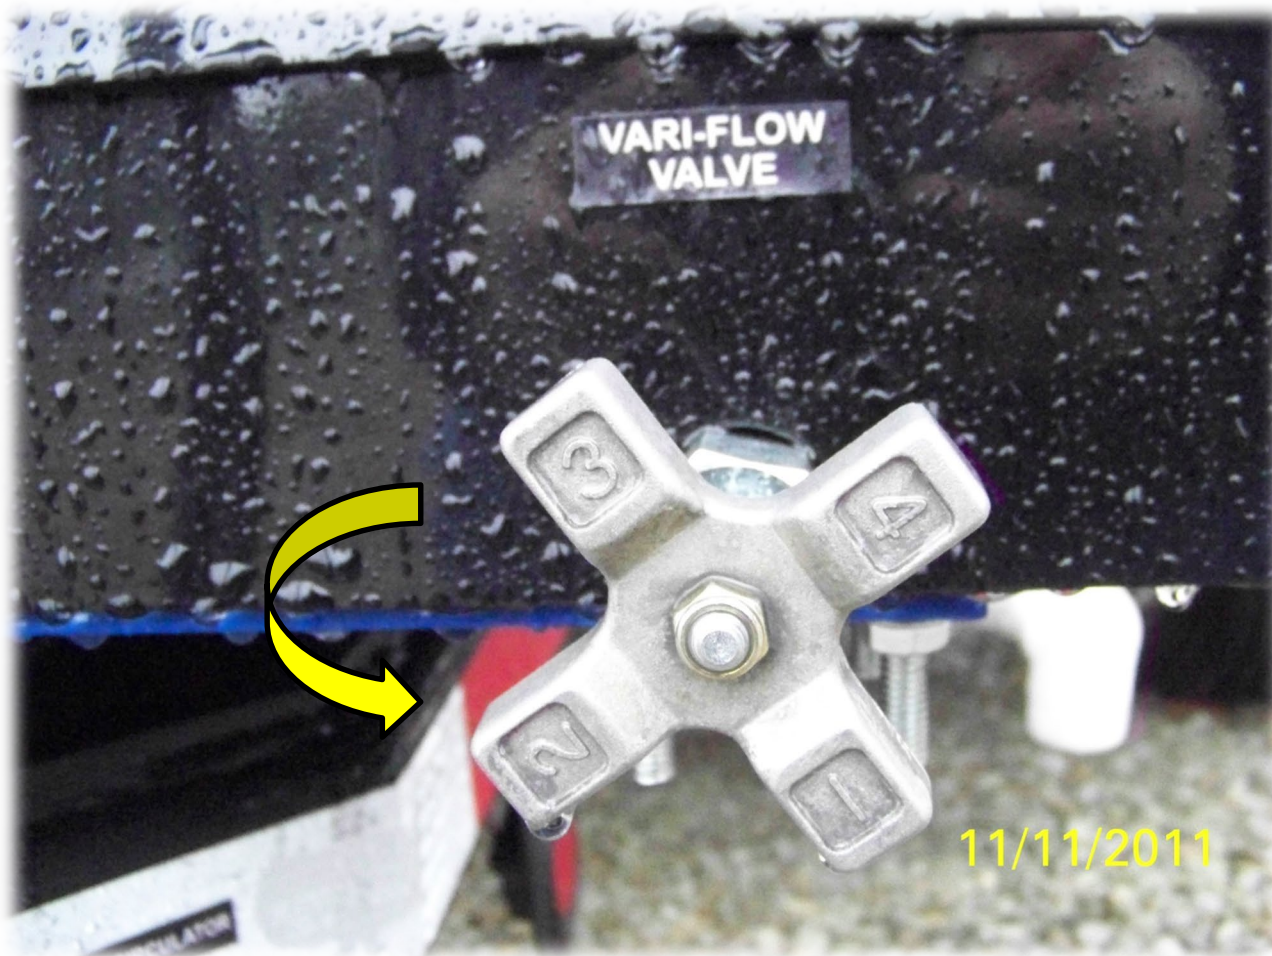


Turn Water Off for 5 Seconds and Turn Back On



Turn Key Off

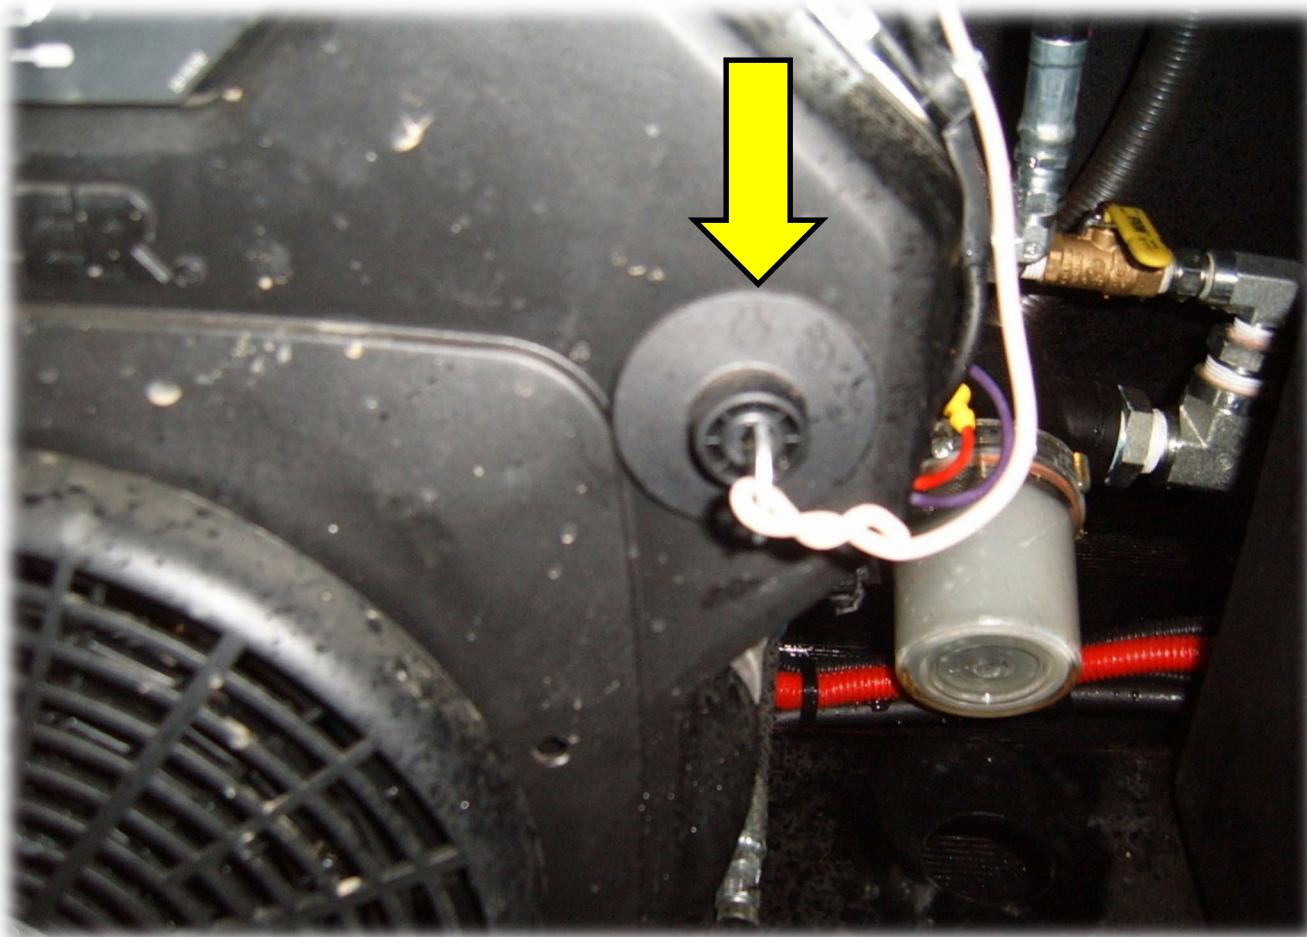


Unit is Anti-Freezed

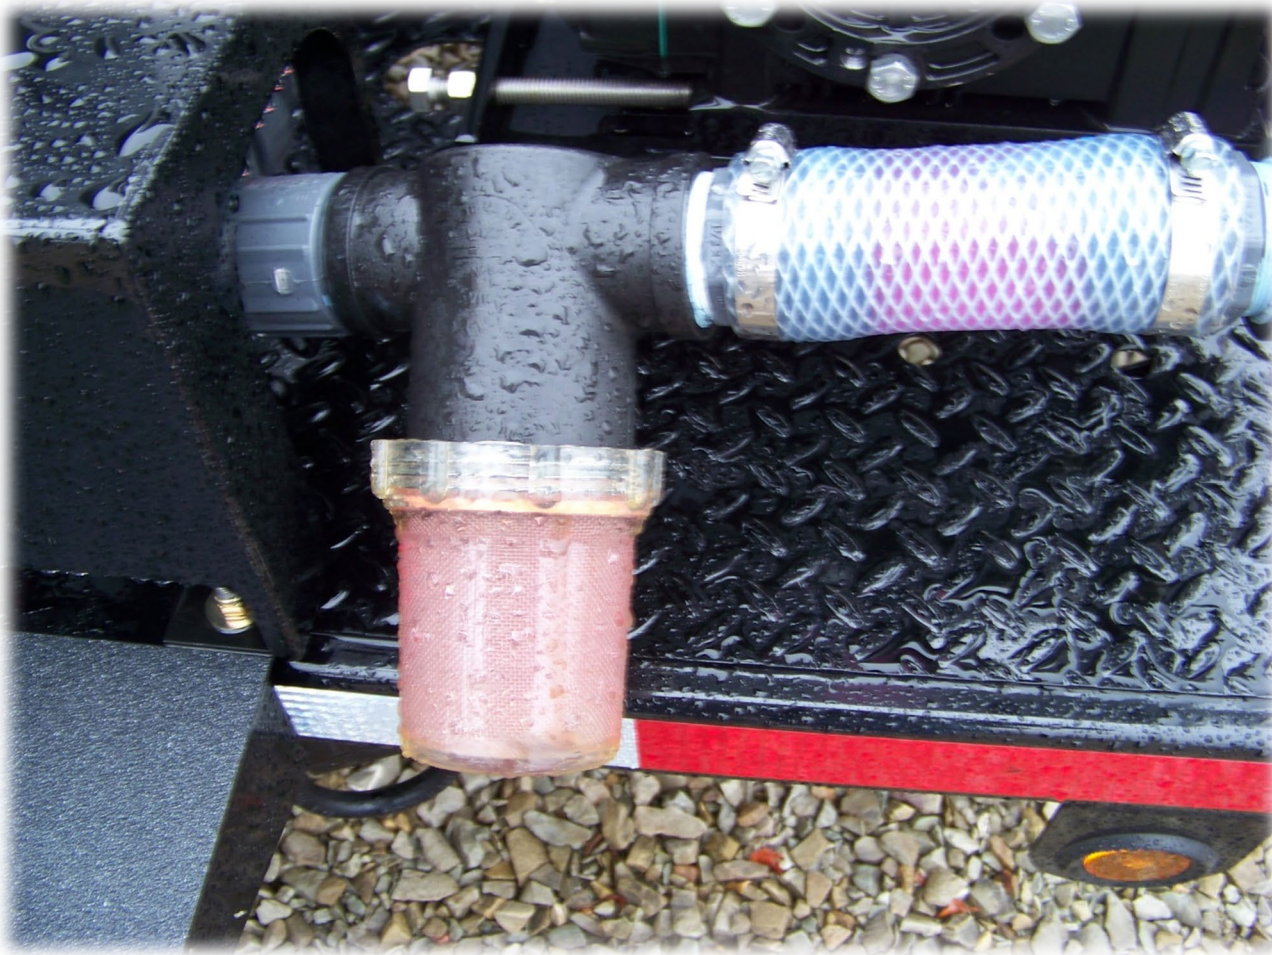


Return Anti-Freeze to Tank



Turn Anti-Freeze Valve Off

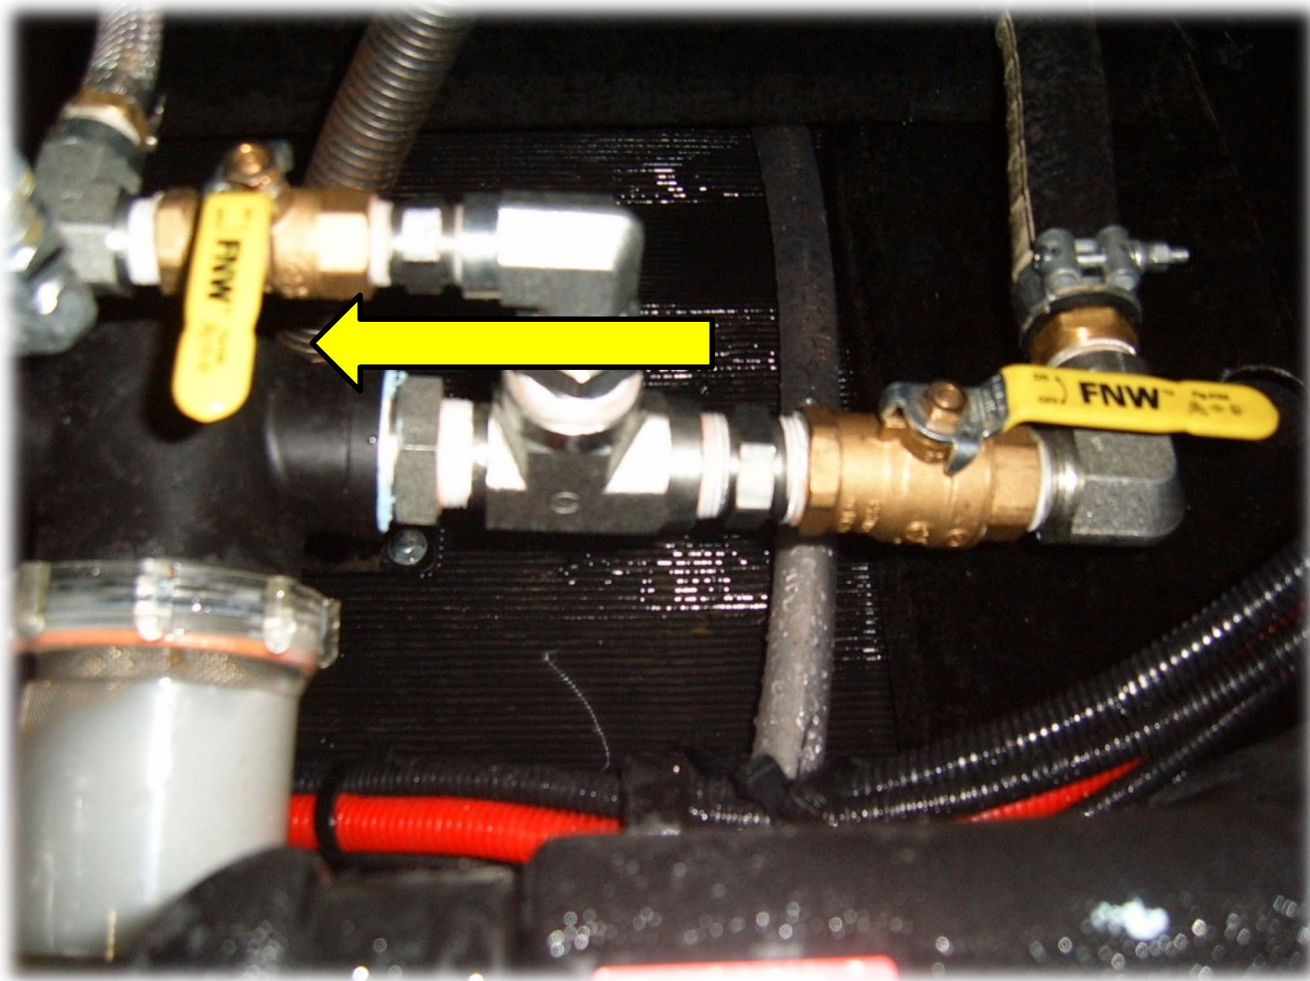


Turn Water Tank Valve On

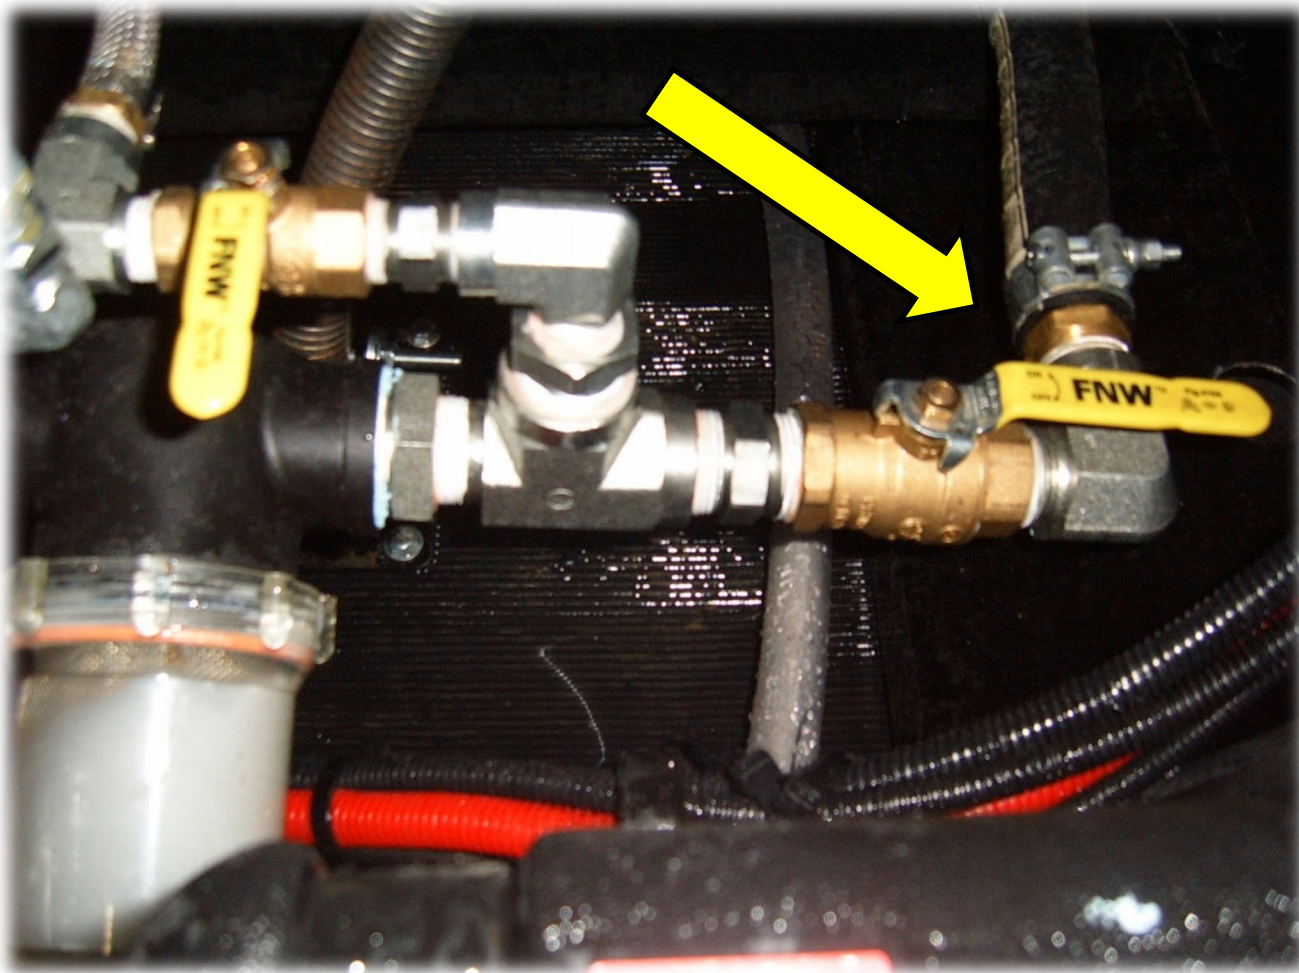


Go to Control Panel



Make Sure the Connect Hose is to Return Anti-Freeze

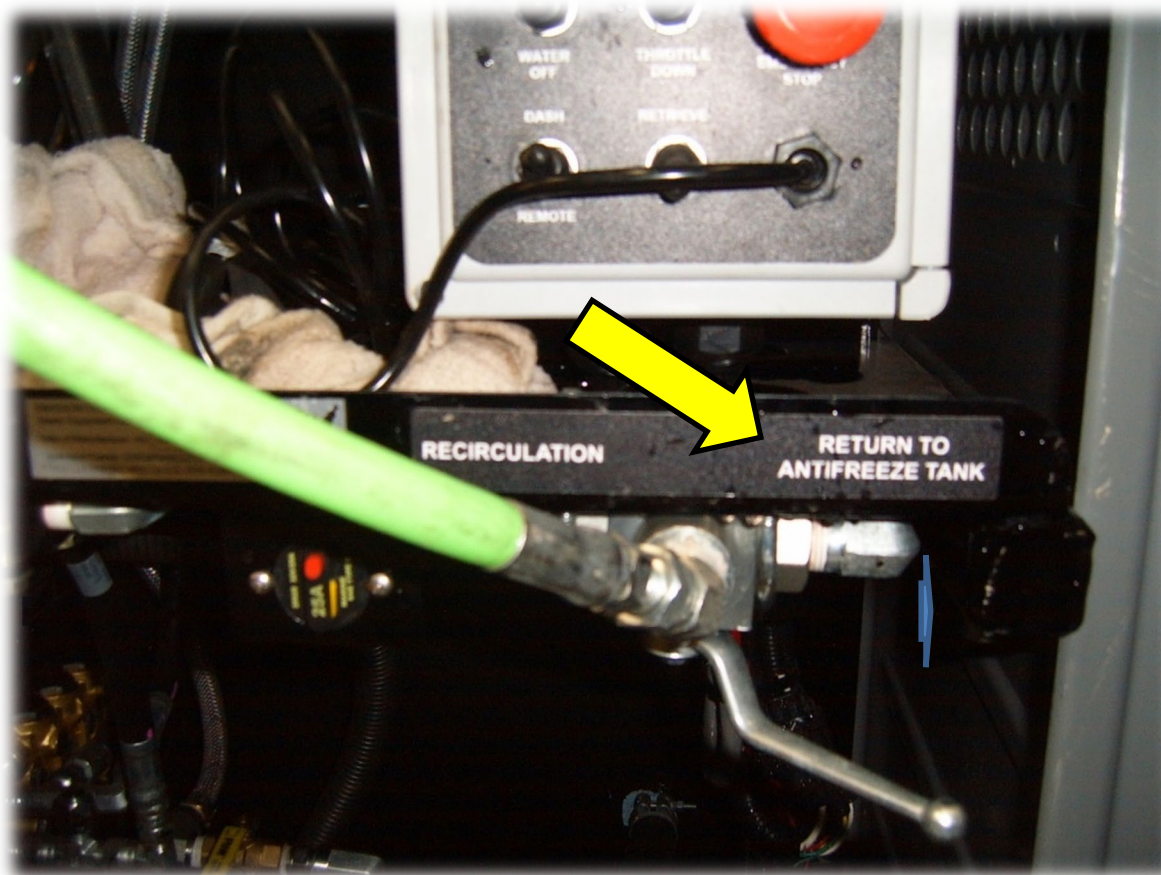

Start Engine

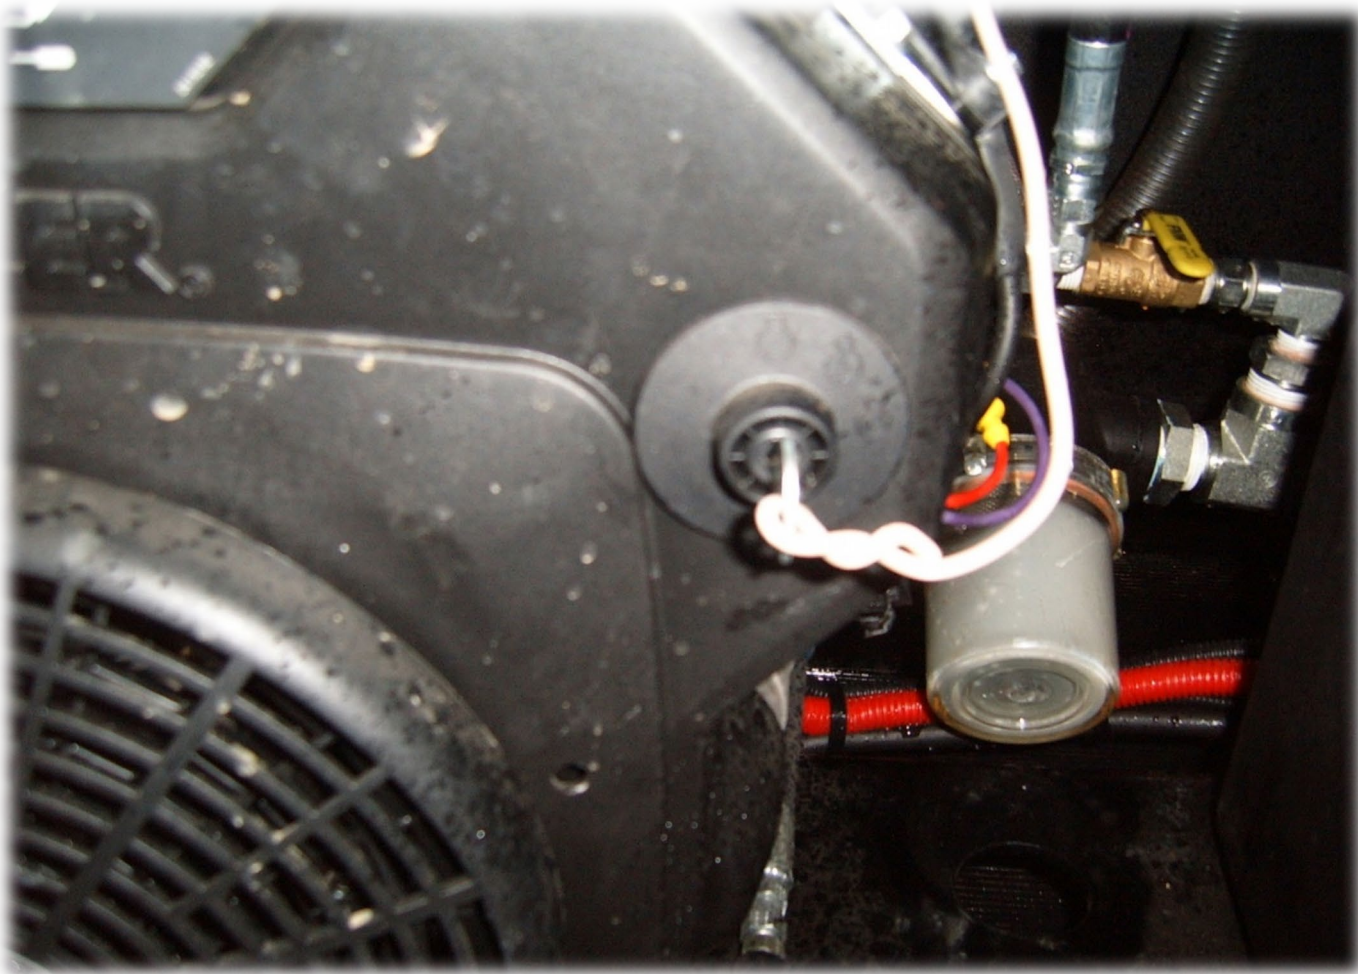

Make Sure Water is On




Watch Anti-Freeze Return Line Until Anti-Freeze is Returned



Turn Water Off



Disconnect Hose

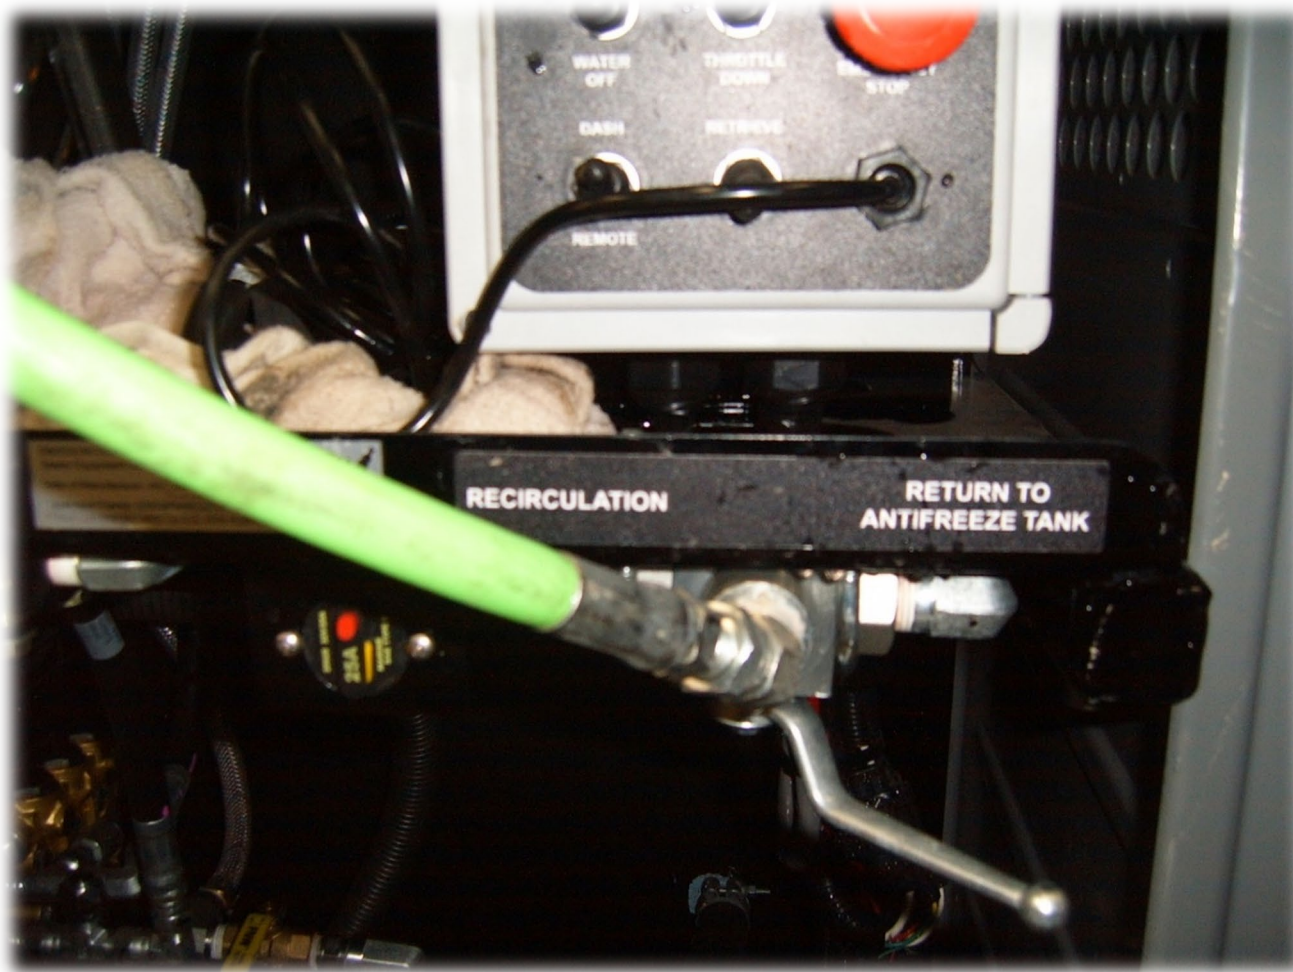

Ready to Use!

